

INSTRUCTION MANUAL ETHYLENE DETECTOR TUBE

No.108SA

- ★ READ CAREFULLY THIS INSTRUCTION MANUAL AND THE INSTRUCTIONS OF THE ASPIRATING PUMP PRIOR TO USING THIS PRODUCT.
- ★ DON'T DISCARD THIS INSTRUCTION MANUAL UNTIL ALL THE TUBES IN THIS BOX ARE USED UP.

1. PERFORMANCE:

Measuring Range	:	20 - 1,200 ppm	
and Sampling Time	:	3 minutes	
Number of pump stroke	:	1 (100mL)	
Colour Change	:	Yellow → Blue	
Operating temperature	:	0 - 40 °C (32-104°F) (Temperature correction is necessary.)	
Aspirating Pump	:	Model AP-20, AP-20S, 400B, AP-1, AP-1S or 400A	<u> </u>

 
ACAUTION

- 1. DETECTOR TUBE CONTAINS REAGENTS.
- 2. DON'T TOUCH THESE REAGENTS DIRECTLY ONCE TUBES ARE BROKEN. 3. KEEP THE TUBES OUT OF THE REACH OF CHILDREN.

NOTICE

- 1. USE ONLY WITH PUMP MODELS AP-20, AP-20S, 400B, AP-1, AP-1S OR 400A. OTHERWISE, CONSIDERABLE ERROR IN INDICATION MAY OCCUR.
- 2. BEFORE TESTING, CHECK THE ASPIRATING PUMP FOR LEAKS (REFER TO ITEM 8. INSPECTION OF ASPIRATING PUMP). ANY PUMPS SHOWING SIGNS OF LEAKAGE SHOULD BE CORRECTED BEFORE USE.
- 3. DO NOT USE THIS TUBE OUTSIDE THE STATED OPERATING TEMPERATURE RANGE.
- 4. STORE TUBES IN A COOL AND DARK PLACE (0-25 °C/32-77°F), AND USE BEFORE EXPIRATION DATE PRINTED ON TOP OF THE BOX.
- 5. PRIOR TO USE, READ CAREFULLY ITEM 9. USER RESPONSIBILITY.
- 6. READ THE CONCENTRATION IMMEDIATELY AFTER MEASUREMENT.

2. SAMPLING AND MEASUREMENT:



- (1) Break both ends of the detector tube.
 - ACAUTION SAFETY GLASSES AND GLOVES SHOULD BE WORN TO PREVENT INJURY FROM SPLINTERING GLASS.
- ② Insert the detector tube into aspirating pump securely as shown in Fig.1. (Arrow mark shall point to the pump.)
- 3 Align the guide marks on the shaft and stopper of the aspirating pump.
- 4 Pull the pump handle at full stroke locked position and wait for 3 minutes or until the completion of sampling is confirmed with the flow indicator of the pump (See descriptions about the flow indicator in the instruction manual of the pump).
- 6 On completion of sampling, read the scale at the maximum point of the stained layer.

- SPECIAL NOTE: I. The scale is calibrated at 20 °C (68°F), 50 %R.H. and 1013hPa. Readings obtained in other circumstances should be corrected (REFER TO ITEM 3. CORRECTION FOR AMBIENT CONDITIONS).
 - II. When the maximum point of the stained layer is unclear or obliquely, read the scale at the centre between the longest and shortest points.

3. CORRECTION FOR AMBIENT CONDITIONS:

① Temperature; Correct the tube reading by following temperature correction table.

Temperature Correction Table									
Tube	Corrected Concentration (ppm)								
Readings	0℃	10 ℃	20 °C	30 ℃	40 °C				
(ppm)	(32°F)	(50°F)	(68°F)	(86°F)	(104°F)				
1200	950	1100	1200	1300	1350				
1000	800	900	1000	1050	1100				
800	650	720	800	820	840				
600	500	550	600	600	600				
400	400	400	400	400	400				
200	200	200	200	180	150				
100	100	100	100	50					
50	70	60	_50	-	-				
20	40	30	20	-	-				

② Humidity; No correction is necessary.

Atmospheric Pressure;

True concentration = Temperature corrected × concentration

1013 Atmospheric pressure (in hPa)

4. INTERFERENCE:

More than 10 ppm of Carbon monoxide changes the whole reagent to green and will give higher reading. More than 500 ppm of Hydrogen sulphide produces a black stain and will give higher reading. More than 20 ppm of Acetylene produces a similar stain and will give higher readings.

5. CHEMICAL REACTION IN THE DETECTOR TUBE:

 $H_2C=CH_2+PdSO_4+(NH_4)_2M_0O_4 \rightarrow M_{O_3}O_8$

6. DISPOSAL OF TUBE:

USED TUBES SHOULD BE DISPOSED CAREFULLY ACCORDING TO THE RELEVANT REGULATIONS, IF ANY.

7. HAZARDOUS AND DANGEROUS PROPERTIES OF ETHYLENE:

TLV-TWA.◆

Explosive range in air : 2.7 - 36 %

◆ Threshold Limit Value established by the American Conference of Governmental Industrial Hygienists, 2004.

8. INSPECTION OF ASPIRATING PUMP:

Checking for leaks:

- (1) Insert a sealed, unbroken detector tube into the pump.
- 2 Align the guide marks on the shaft and stopper of the pump.
- Pull the handle to full stroke and wait for 1 minute.
- Unlock the handle and allow it to return slowly into the pump by holding the cylinder and handle securely.

ACAUTION HANDLE WILL TEND TO SNAP BACK INTO THE PUMP QUICKLY.

(5) If the handle returns completely to the original position, the performance is satisfactory. Otherwise, refer to maintenance procedure in the instruction manual of the pump to correct the leakage.

9. USER RESPONSIBILITY:

It is the sole responsibility of the user of this equipment to ensure that the equipment is operated, maintained, and repaired in strict accordance with these instructions and the instructions provided with each Model AP-20, AP-20S, 400B, AP-1, AP-1S or 400A aspirating pump, and that detector tubes are not used which are either beyond their expiration date or have a colour change different to that stated in the Performance specifications.

The Manufacturer and Manufacturer's Distributors shall not be otherwise liable for any incorrect measurement or any damages, whether damages result from negligence or otherwise.

IME1080/1

Printed in Japan