

INSTRUCTION MANUAL n-HEXANE DETECTOR TUBE

No.113SA

- ★ READ CAREFULLY THIS INSTRUCTION MANUAL AND THE INSTRUCTIONS OF THE ASPIRATING PUMP PRIOR TO USING THIS PRODUCT.
- ★ DO NOT DISCARD THIS INSTRUCTION MANUAL UNTIL ALL THE TUBES IN THIS BOX ARE USED UP.

1. PERFORMANCE:

Measuring Range	: 0.05 - 0.6 % (*)	0.11 - 1.32 %
and Sampling Time:	: 1 minute	45 seconds
(*) Graduations on the detector tube are based on 1 pump stroke.		
Number of pump strokes	: 1 (100mL)	1/2 (50mL)
Colour Change:	: Orange → Dark Green	
Detectable Limit:	: 0.005% (1 pump stroke)	
Operating temperature:	: 10 - 40 °C (50-104°F)	(Temperature correction is necessary.)
Aspirating Pump:	: Model AP-20, AP-20S, 400B, AP-1, AP-1S or 400A	


CAUTION

1. DETECTOR TUBE CONTAINS REAGENTS (CHROMIUM OXIDE).
2. DO NOT TOUCH THESE REAGENTS DIRECTLY ONCE TUBES ARE BROKEN.
3. KEEP THE TUBES OUT OF THE REACH OF CHILDREN.

NOTICE

1. USE ONLY PUMP MODELS AP-20, AP-20S, 400B, AP-1, AP-1S OR 400A. OTHERWISE, CONSIDERABLE ERROR IN INDICATION WILL OCCUR.
2. BEFORE TESTING, CHECK THE ASPIRATING PUMP FOR LEAKS (REFER TO ITEM 8. INSPECTION OF ASPIRATING PUMP). ANY PUMPS SHOWING SIGNS OF LEAKAGE SHOULD BE CORRECTED BEFORE USE.
3. DO NOT USE THIS TUBE BEYOND THE STATED OPERATING TEMPERATURE RANGE.
4. STORE TUBES IN A COOL AND DARK PLACE (0-25 °C/32-77°F), AND USE BEFORE EXPIRATION DATE PRINTED ON TOP OF THE BOX.
5. PRIOR TO USE, READ CAREFULLY ITEM 9. USER RESPONSIBILITY.
6. READ THE CONCENTRATION IMMEDIATELY AFTER MEASUREMENT.

2. SAMPLING AND MEASUREMENT:

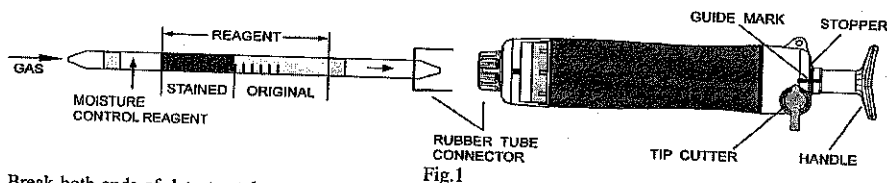

- ① Break both ends of detector tube.

CAUTION SAFETY GLASSES AND GLOVES SHOULD BE WORN TO PREVENT INJURY FROM SPLINTERING GLASS.

- ② Insert the detector tube into aspirating pump securely as shown in Fig.1. (Arrow mark shall point to the pump.)
- ③ Align the guide marks on the handle and stopper of the aspirating pump.
- ④ Pull the pump handle at full stroke until it locks and wait for 1 minute or until the completion of sampling is confirmed with the flow indicator of the pump (See descriptions about the flow indicator in the instructions of the pump).
- ⑤ On completion of sampling, read the scale at the maximum point of the stained layer and correct it with the temperature correction table if needed.
- ⑥ If the discolouration is over the scale, change the tube and pull 1/2 strokes.
 - 1) Insert the new tube to the pump inlet. Pull the handle at 1/2 strokes (to 50mL line), and it will be automatically locked. Leave it for 45 seconds as it is.
 - 2) Remove the detector tube from the pump and read the concentration.
 - 3) Then multiply the reading value by 2.2 after temperature correction of the readings if needed.

- SPECIAL NOTE:**
- I. The scale is calibrated at 20 °C (68°F), 50 %R.H. and 1013hPa. Readings obtained in other circumstances should be corrected (REFER TO ITEM 3. CORRECTION FOR AMBIENT CONDITIONS).
 - II. When the maximum of the stained layer is unclear or obliquely, read the scale at the centre between the longest and shortest points.

3. CORRECTION FOR AMBIENT CONDITIONS:

- ① Temperature; Correct the tube reading by following temperature correction table.

Tube Readings (%)	Temperature Correction Table				
	Corrected Concentration (%)				
	10 °C (50°F)	15 °C (59°F)	20 °C (68°F)	30 °C (86°F)	40 °C (104°F)
0.6	0.73	0.65	0.60	0.52	0.48
0.5	0.60	0.55	0.50	0.45	0.42
0.4	0.48	0.44	0.40	0.37	0.35
0.3	0.35	0.32	0.30	0.28	0.27
0.2	0.22	0.21	0.20	0.19	0.18
0.1	0.10	0.10	0.10	0.10	0.10


- ② Humidity; No correction is necessary.
- ③ Atmospheric Pressure;

$$\text{True concentration} = \frac{\text{Temperature corrected concentration} \times 1013}{\text{Atmospheric pressure (in hPa)}}$$

4. INTERFERENCE:

Coexistence of Paraffinic hydrocarbons (more than C₃), Acetylene, or Ethylene produces similar stain and will give higher readings. Each coexistence of more than 400 ppm of Benzene, 800 ppm of Toluene or 2000 ppm of Xylene produces a similar stain and will give higher readings. Less than 6% of Alcohols, Ketones or Esters does not affect the reading value.

5. CHEMICAL REACTION IN THE DETECTOR TUBE:



6. DISPOSAL OF TUBE:

USED TUBES SHOULD BE DISPOSED CAREFULLY ACCORDING TO THE RELEVANT REGULATIONS, IF ANY.

7. HAZARDOUS AND DANGEROUS PROPERTIES OF HEXANE:

TLV-TWA: ◆ : 50 ppm

Explosive range in air : 1.1 - 7.5 %

◆ Threshold Limit Value established by the American Conference of Governmental Industrial Hygienists, 2004.

8. INSPECTION OF ASPIRATING PUMP:

Checking for leaks;

- ① Insert sealed, unbroken detector tube into the pump.
- ② Align the guide marks on the shaft and stopper of the pump.
- ③ Pull the handle to full stroke and wait for 1 minute.
- ④ Unlock the handle and allow it to return slowly into the pump by holding the cylinder and handle securely.

CAUTION HANDLE WILL TEND TO SNAP BACK INTO THE PUMP QUICKLY.

- ⑤ If the handle returns completely to the original position, the performance is satisfactory. Otherwise, refer to maintenance procedure in the pump instructions to correct the fault.

9. USER RESPONSIBILITY:

It is the sole responsibility of the user of this equipment to ensure that the equipment is operated, maintained, and repaired in strict accordance with these instructions and the instructions provided with each Model AP-20, AP-20S, 400B, AP-1, AP-1S or 400A aspirating pump, and that detector tubes are not used which are either beyond their expiration date or have a colour change different to that stated in the Performance specifications.

The Manufacturer and Manufacturer's Distributors shall not be otherwise liable for any incorrect measurement or any damages, whether damages result from negligence or otherwise.